

## Using the Washing Machine

1. Sort dirty laundry into colours. For example:
  - All dark colours together
  - All light colours together
2. Half fill the washing machine with laundry of similar colours. Make sure the laundry has room to move when the machine is switched on



3. Pour 1 cup of detergent

One capful of fabric softener



4. Turn the dial to 30 degrees on cotton.



5. Press the "start" button



